
# T46ULPERFPED-3SM


46" ULTRALEISURE PERFORATED STYLE 3 SEAT PEDESTAL TABLE SURFACE MOUNT DESIGN

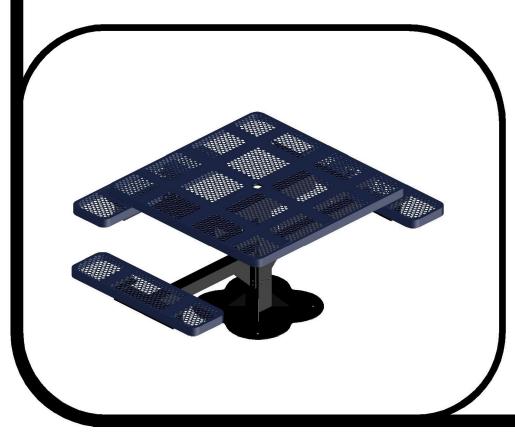

Please take the time to locate and identify each part. Assemble the units on a smooth flat surface. It is also helpful to lay the tops and seats on cardboard or a drop cloth to prevent scratching of the surface during assembly. All parts have been pre—cut and pre—drilled for ease of assembly. All holes are slotted to allow for easy assembly and for final levelling of tops and seats to frames. Fully assemble all parts without totally tightening nuts and bolts. After all assembled go back and retighten nuts to bolts. DO NOT OVER TIGHTEN NUTS TO BOLTS. Over tightened nuts can crack the plastisol coating. All the necessary quantities of parts required are listed in this assembly instructions.

DO NOT BEGIN ASSEMBLY UNTIL YOU HAVE READ THESE INSTRUCTIONS AND ARE FAMILIAR WITH THE PARTS.


# PARTS IDENTIFICATION

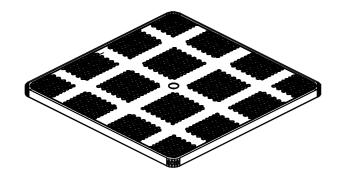


(A) 46" SQ. ULPERF TOP



(B) 38" ULPERF SEAT

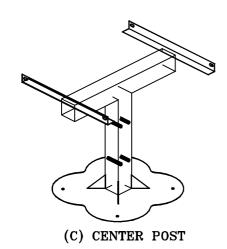

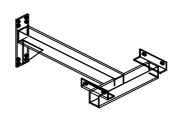

(D) PED ARM

# PARTS LIST


| ITEM | PART#      | DESCRIPTION         | QTY |
|------|------------|---------------------|-----|
|      | •••        |                     | 4   |
| A    | TT46ULPERF | 46" SQ. UL PERF TOP | 1   |
| В    | S38ULPERF  | 38" UL PERF SEAT    | 3   |
| С    | F46PEDCPSM | CENTER POST         | 1   |
| D    | F46PEDARM  | PEDESTAL ARM        | 3   |
|      |            |                     |     |

| ITEM | HARDWARE DESCRIPTION    | QTY. |
|------|-------------------------|------|
| HW1  | 5/16" X 18 NYL LOCKNUTS | 16   |
| HW2  | 5/16" X 18GA CAP BOLTS  | 16   |
| нwз  | 5/16" FLAT WASHERS      | 32   |
| HW4  | BOLT GUARDS             | 16   |
| HW5  | 5/8" BOLTS              | 8    |
| HW6  | 5/8" NUTS               | 8    |
|      | •                       |      |

ASSEMBLY TOOLS REQUIRED 2- 1/2" WRENCHES

# HARDWARE IDENTIFICATION





(HW1) 5/16" X 18 NYL LOCKNUTS



(HW2) 5/16" X 18 GAUGE CAP BOLTS

(HW5) 1/2" NUTS



(HW3) 5/16" FLAT WASHERS



(HW4) BOLT GUARDS

(HW6) 1/2" WASHERS

## ASSEMBLY PROCEDURES

#### STEP 1

MOUNT THE CENTER POST TO A SMOOTH LEVEL SURFACE. SURFACE MOUNTING HARDWARE NOT INCLUDED.

#### STEP 2

BOLT THE 3 ARMS TO THE CENTER PEDESTAL USING 5/8" X 5 1/2" BOLTS & 5/8" NYLOCK NUTS. TIGHTEN BOLTS UP TIGHT.

## STEP 3


MOUNT TOP ON CENTER PEDESTAL POST BY MATCHING UP THE HOLES ON BRACES OF THE TOP TO THE HOLES IN THE 2"  $\times$  2" ANGLE IRON ON THE POST. MOUNT BY MEANS OF FOUR 5/16" X 1 1/2" CAP BOLTS, EIGHT 5/16" FLAT WASHERS, AND FOUR 5/16" NYLOCK NUTS.


#### STEP 4

SET EACH OF THE THREE SEATS ON THE SEAT BRACKETS OF THE PEDESTAL ARMS. MATCHING UP THE TWO ARMS UNDER THE SEATS WITH FOUR HOLES ON THE ANGLE IRON BRACE OF THE ARMS. MOUNT BY MEANS OF EIGHT 5/16" X 1 1/2" CAP BOLTS, SIXTEEN 5/16" FLAT WASHERS, AND EIGHT 5/16" NYLOCK NUTS.

## STEP 5

TIGHTEN ALL NUTS ON BOLTS AND PLACE BOLT GUARDS ON ALL NUTS. <u>DO NOT OVER TIGHTEN AS THIS COULD CAUSE THE PLASTISOL COATING TO CRACK.</u>

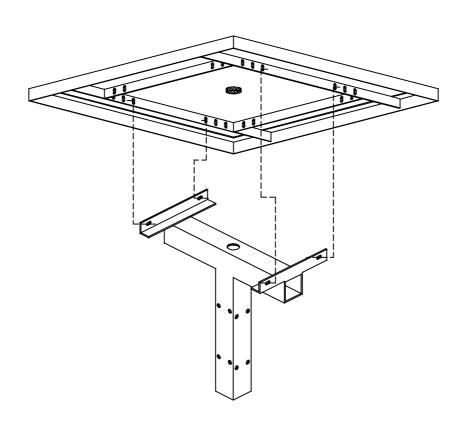

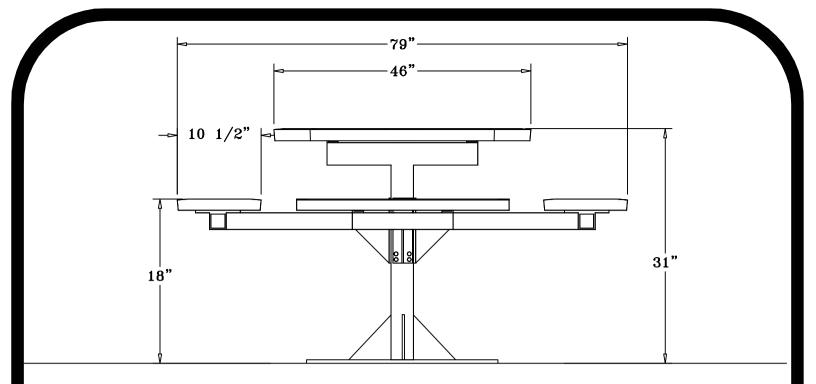

## **SPECIFICATIONS**

46" SQ. PRECISION PUNCHED STEEL TABLE WITH THREE ATTACHED 38" X 10 1/2" SEATS. ALL CORNERS ARE ROUNDED. FRAME IS SURFACE MOUNT DESIGN.

COATED WITH A 1/8" TO 1/4" THICK PLASTISOL ULTRAVIOLET STABILIZED VINYL COATING FUSED AND BAKED TO A 90% GLOSS.

TABLE HEIGHT IS 31" APPROXIMATELY. SEAT HEIGHT IS 18" APPROXIMATELY. TOTAL OVERALL SQUARED DIMENSION IS 79".

TOP AND SEATS ARE MADE OF 11 GAGE PUNCHED STEEL WITH 3/4" Ø HOLES INSIDE OF A 2" X 3/4" X 1/8" ANGLE IRON FRAME. ALL CENTER BRACES ARE MADE FROM 1/4" X 1 1/2" FLAT STEEL.

FRAME IS A SINGLE 4" X 4" PEDESTAL MOUNTED TO THE CENTER OF THE TABLE TOP. EXTENDING OUT FROM THE 4" SQUARE TUBING ARE THREE 3" SQUARE TUBING ARMS THAT THE SEATS ARE MOUNTED TO. COATED WITH A BAKED ON POLYESTER POWDER COAT FINISH.

ALL HARDWARE IS NON-CORROSIVE. WEIGHT FOR THE T46ULPERFPED-3SM IS 305 LBS.

### MAINTENANCE

To maintain luster it is recommended to wash, rinse, and dry the units after prolonged use. Check for loose bolts and nuts and tighten as needed. Contact the factory for genuine Webcoat part replacements if needed.