


Sequoia Professional Aurora Traditional Park Bench 4ft


Assembly Guide


IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started.
Once all bolts are inserted, go back & tighten all the bolts.

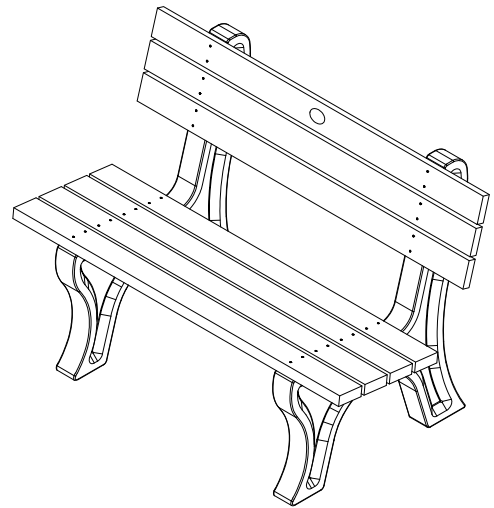


HARDWARE INCLUDED

A  Qty: 12
#7 x 2"

B  Qty: 16
#7 x 3"


TOOLS INCLUDED



T-15 TORX BIT


CUSTOMER SUPPLIED TOOLS

Cordless screwdriver/drill OR
Multi-bit handle for the Torx Bit

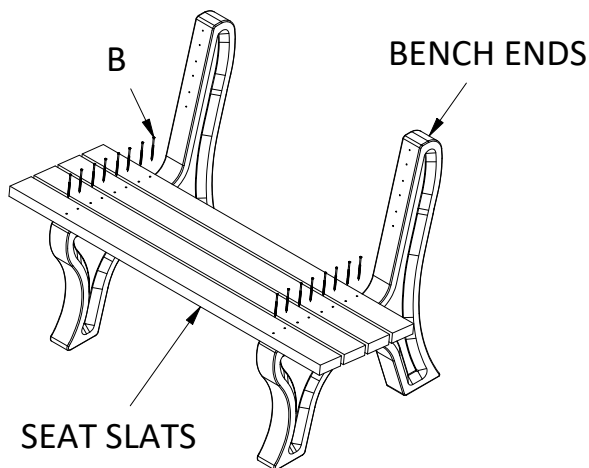

1) Attach (4) Seat Slats to (2) Bench Ends
using (16) "B" Wood Screws as shown.

2) Attach (3) Back Slats to (2) Bench Ends
using (12) "A" Wood Screws as shown.
The Slat with Badge to be on Top

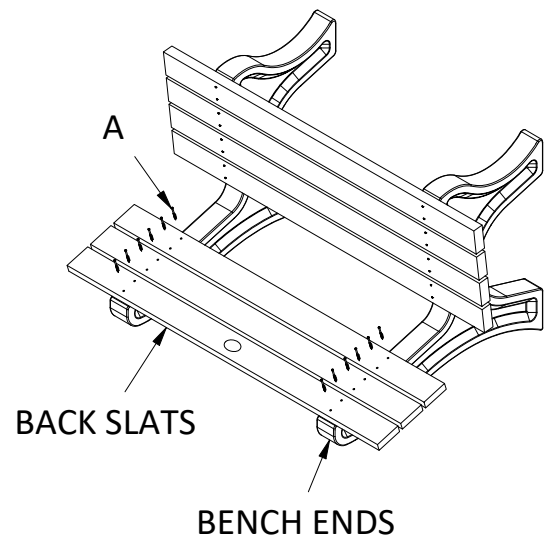

SEQUOIA
PROFESSIONAL
by **highwood**

For information on Care and Cleaning or to Register your
SEQUOIA PROFESSIONAL product by *highwood*®, please visit
www.highwood-usa.com.

CM-BENSQ43 | CM-BENSQ63
06.20.22


PAGE 1 OF 2

Sequoia Professional Aurora Traditional Park Bench 6ft


Assembly Guide


IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started.
Once all bolts are inserted, go back & tighten all the bolts.

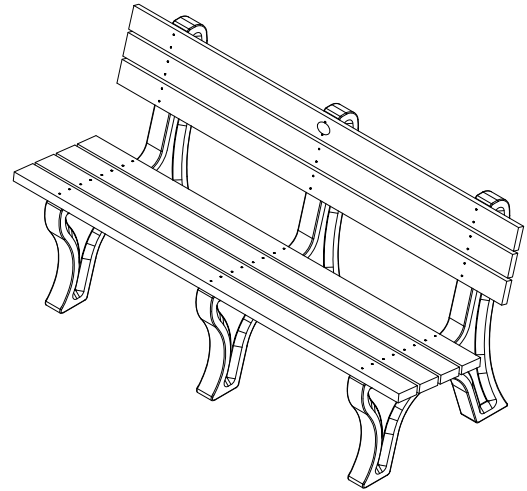


HARDWARE INCLUDED

A  Qty: 18
#7 x 2"

B  Qty: 24
#7 x 3"


TOOLS INCLUDED



T-15 TORX BIT


CUSTOMER SUPPLIED TOOLS

Cordless screwdriver/drill OR
Multi-bit handle for the Torx Bit

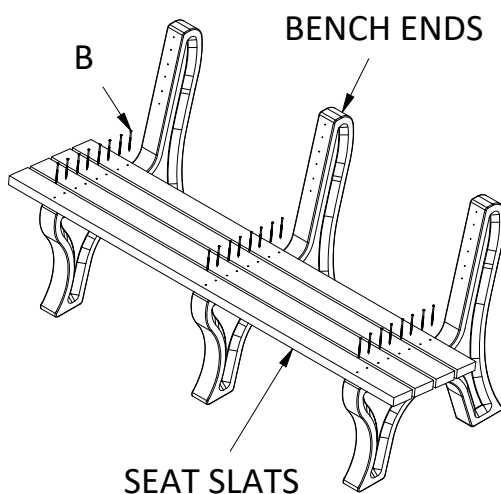

1) Attach (4) Seat Slats to (3) Bench Ends using (24) "B" Wood Screws as shown.

2) Attach (3) Back Slats to (3) Bench Ends using (18) "A" Wood Screws as shown.
The Slat with Badge to be on Top

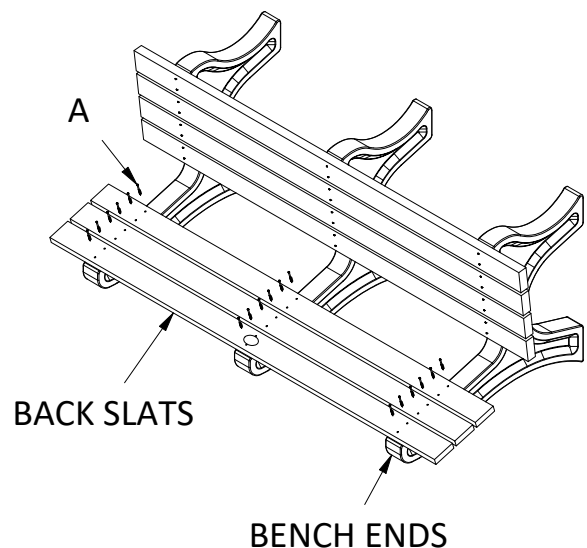

SEQUOIA
PROFESSIONAL
by **highwood**

For information on Care and Cleaning or to Register your
SEQUOIA PROFESSIONAL product by *highwood*®, please visit
www.highwood-usa.com.

CM-BENSQ43 | CM-BENSQ63
06.20.22

PAGE 2 OF 2