

Regal Rectangle Pedestal Table




A customer favorite, the Regal style commercial-grade rectangle pedestal table is a must-have for any outdoor dining space. The Regal table top and seats feature a 3/4" #9 expanded metal design inside of a 2" x 2" iron frame with a standard umbrella hole. The table and seat tops are supported by a 4" heavy-duty powder coated frame. Our limited warranty guarantees years of protection on the textured polyethylene coating on the table and seat tops as well as the powder coated frame. Pick between in-ground or surface mount options to make installing your pedestal table as easy as possible. This commercial picnic table is also available as an ADA accessible table. Use the form below for your custom quote. SPECIFICATIONS & OPTIONS • Features heavy-duty 4" square powder coated frame powder coated frame • Textured polyethylene table top and seats • Surface or in-ground mount option • 6' or 8' length table top featuring standard umbrella hole

Dimensions Length: 6' L Dimensions Length: 8' L Frame Style: Pedestal Collection Type of Coating: Textured Polyethylene Product Type: Table Series: Regal Shape: Rectangle Mount Type: Surface Mount Mount Type: In-ground Mount

Maintainance

To maintain luster it is recommended to wash, rinse, and dry the units after prolonged use. Check for loose bolts and nuts and tighten as needed. Contact the factory for genuine Webcoat part replacements if needed.

Questions? Call an expert: 1-800-213-2401

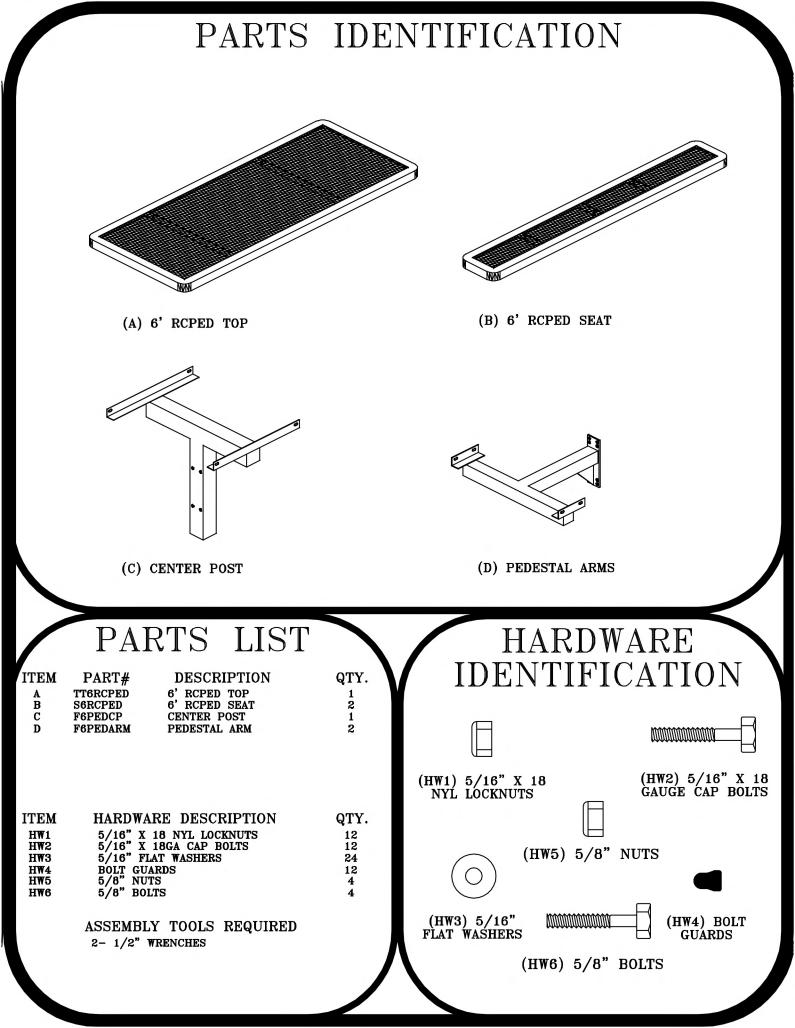

ASSEMBLY PROCEDURES

STEP 1

DIG A FOOTING HOLE 24" SQUARE TO ALLOW FOR 18" OF INGROUND INSTULATION OF PEDESTAL STAND. SET PEDESTAL STAND 18" IN FOOTING HOLE AND PROP IN A PLUMB AND LEVEL POSITION. POUR CONCRETE AND LET STAND FOR 24 HOURS BEFORE COMPLETING THESE ASSEMBLY INSTRUCTIONS.

STEP 2

BOLT THE 2 ARMS TO THE CENTER PEDESTAL USING 5/8" X 5 1/2" BOLTS & 5/8" NYLOCK NUTS. TIGHTEN BOLTS UP TIGHT.

STEP 3

MOUNT TOP ON CENTER PEDESTAL POST BY MATCHING UP THE HOLES ON BRACES OF THE TOP TO THE HOLES IN THE 2" \times 2" ANGLE IRON ON THE POST. MOUNT BY MEANS OF FOUR 5/16" X 1 1/2" CAP BOLTS, EIGHT 5/16" FLAT WASHERS, AND FOUR 5/16" NYLOCK NUTS.

STEP 4

SET EACH OF THE TWO SEATS ON THE SEAT BRACKETS OF THE PEDESTAL ARMS. MATCHING UP THE TWO ARMS UNDER THE SEATS WITH FOUR HOLES ON THE ANGLE IRON BRACE OF THE ARMS. MOUNT BY MEANS OF EIGHT 5/16" X 1 1/2" CAP BOLTS, SIXTEEN 5/16" FLAT WASHERS, AND EIGHT 5/16" NYLOCK NUTS.

STEP 5

TIGHTEN ALL NUTS ON BOLTS AND PLACE BOLT GUARDS ON ALL NUTS. <u>DO NOT OVER TIGHTEN AS</u> THIS COULD CAUSE THE PLASTISOL COATING TO CRACK.

