


FurnitureLeisure.com PicnicFurniture.com PicnicFurniture.com ParkTables.com UBrace.com

1-800-213-2401 | sales@furniturelsiesure.com



Model #T42RASS

2/27/2019 Page 1 of 8

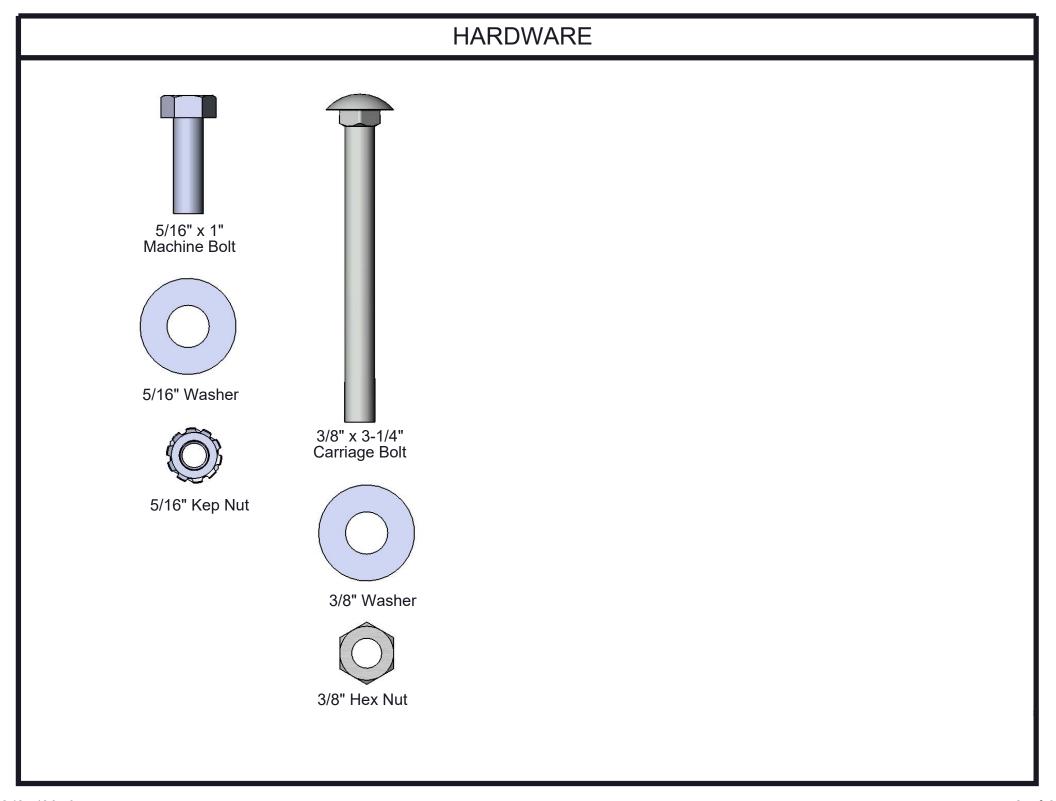

2/27/2019 Page 2 of 8

#### PRODUCT SPECIFICATIONS

## T42RASS 46" PORTABLE PICNIC TABLE WALK-THROUGH DESIGN

Top & Seats: 11 gauge die formed angle frame 1"x1-7/8". 3/4" #9 steel expanded metal. The understructure/attachment plates are fabricated from 7 gauge x 1-1/2" flat bar. Seat side and attachment plates are 7ga laser cut. Electrically MIG welded.

Coating: Oven fused functionalized polyethylene copolymer-based thermoplastic. Fluidized bed coating application with superior mechanical performance, impact resistance and UV-stability.

Frame: 2-3/8" O.D. x 12 gauge pre-galvanized structural steel tubing. Cross braces 1-5/16" O.D. x 15 gauge pre-galvanized structural steel tubing. Seat and top mounting points 7 gauge x 1-1/2" die stamped steel flat bar. Legs are bent over a mandrel through the bend radius producing a wrinkle free bend. All electrically MIG welded.

Frame Coating: Electrostatic powder coated application oven cured.

Hardware: Stainless steel and zinc coated hardware fasteners.

Dimensions: 46" portable picnic table walk-through design. Top is 46" diameter and is 30" high. Seats are 18" wide x 23-3/4" deep and 18" high. Outside to outside dimension is 92" round x 37" high.

2/27/2019 Page 3 of 8

#### COMPONENTS




ITEM NO.	PartNo	DESCRIPTION	QTY
1	P-V230	230 Leg	4
2	01-04-0245	230 Spreader Plate	1
3	T-V46RD-T	46" Round Expanded Top for 230 table	1
4	T-V18CT-S	18" expanded contour seat	4
5	33-02-0007	5/16" SS Washer	48
6	33-02-0002	3/8" Zinc Plated Washer	4
7	33-05-0029	5/16" x 1" Machine Bolt (SS)	24
8	33-03-0012	5/16" Kep Nut (SS)	24
9	33-06-0009	3/8" x 3-1/4" Carriage Bolt (Zinc)	4
10	33-01-0002	3/8" Hex Nut (Zinc)	4

Optional Surface Mount Hardware: 5/16" x 4" Concrete Expansion Anchor Bolts (Not Included)

2/27/2019 Page 4 of 8


### STEP 1

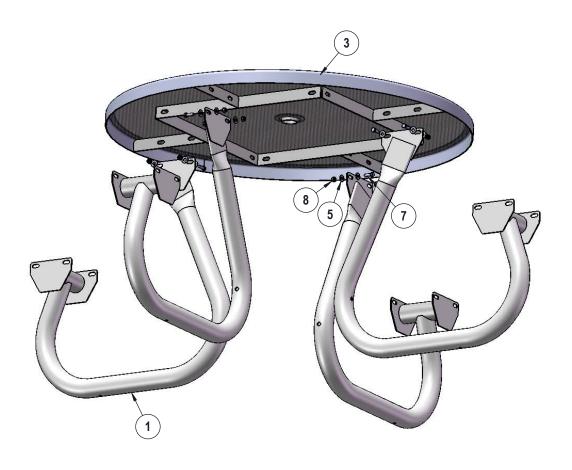

Attach the Top to the Legs as shown using specified hardware.

2/27/2019 Page 5 of 8

#### STEP 2

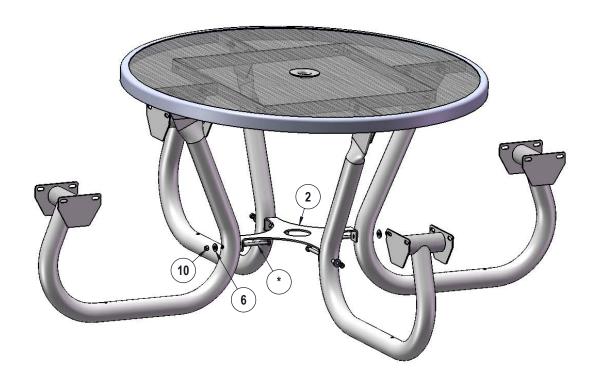

Attach the Spreader Plate to the Legs as shown using specified hardware.

2/27/2019 Page 6 of 8


#### STEP 3




Attach the Seats to the Frames as shown using specified hardware.


2/27/2019 Page 7 of 8

# OVERALL DIMENSIONS

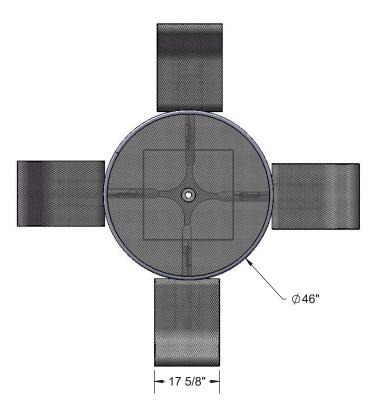

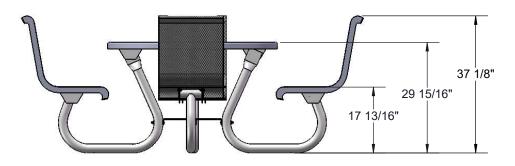



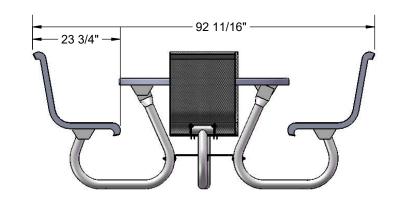

2/27/2019 Page 8 of 8