



Furniture Leisure


Commercial Site Furnishings

FurnitureLeisure.com PoolFurnitureSupply.com

PicnicFurniture.com PicnicTableSupplier.com

ParkTables.com UBrace.com

1-800-213-2401 | sales@furnitureleisure.com

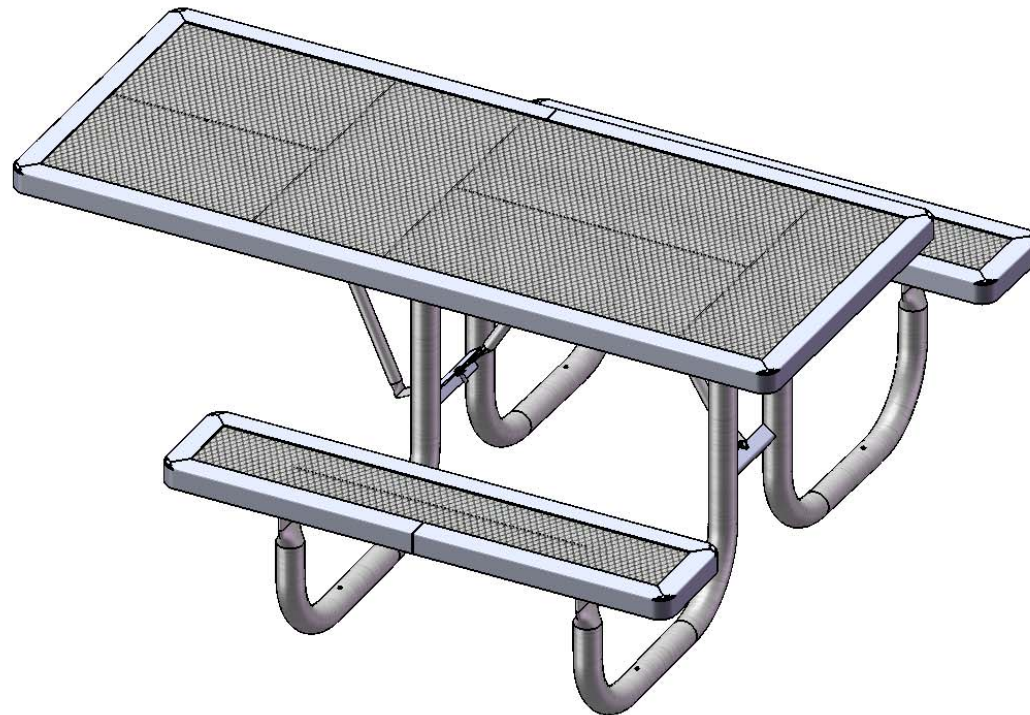


Model # T6RCHDCP


HARDWARE



5/16" x 1"
Machine Bolt

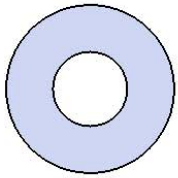

5/16" Washer

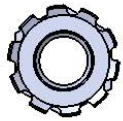

5/16" Washer

PRODUCT SPECIFICATIONS

T6RCHDCP PORTABLE PICNIC TABLE WALK THROUGH DESIGN

Seat & Back: 2" x 2" x 1/8" formed angle frame with 1-1/2" radius corners. 3/4" #9 steel expanded metal. 7 gauge x 1-1/2" flat bar center support and mounting bracket understructure. Electrically MIG welded.

Coating: Oven fused functionalized polyethylene copolymer-based thermoplastic. Fluidized bed coating application with superior mechanical performance, impact resistance and UV-stability.


Frame: 2-3/8" O.D. x 12 gauge pre-galvanized structural steel tubing. Cross braces 1" O.D. x 16 gauge pre-galvanized structural steel tubing. Brace attachment points 1-1/2"x1-1/2"x3/16" steel angle. Seat and top mounting points 7 gauge x 1-1/2" die stamped steel flat bar. Legs are bent over a mandrel through the bend radius producing a wrinkle free bend. Holes are predrilled in legs for optional surface mounting. All electrically MIG welded.

Frame Coating: Electrostatic powder coated application oven cured.

Hardware: All stainless steel hardware fasteners.


Dimensions: 6' portable picnic table walk-through design. Top is 30" wide x 72" long x 30-13/16" high. Seats are 10" wide x 48" long x 18-13/16" high. Outside to outside dimensions are 67-7/16" x 72".

COMPONENTS

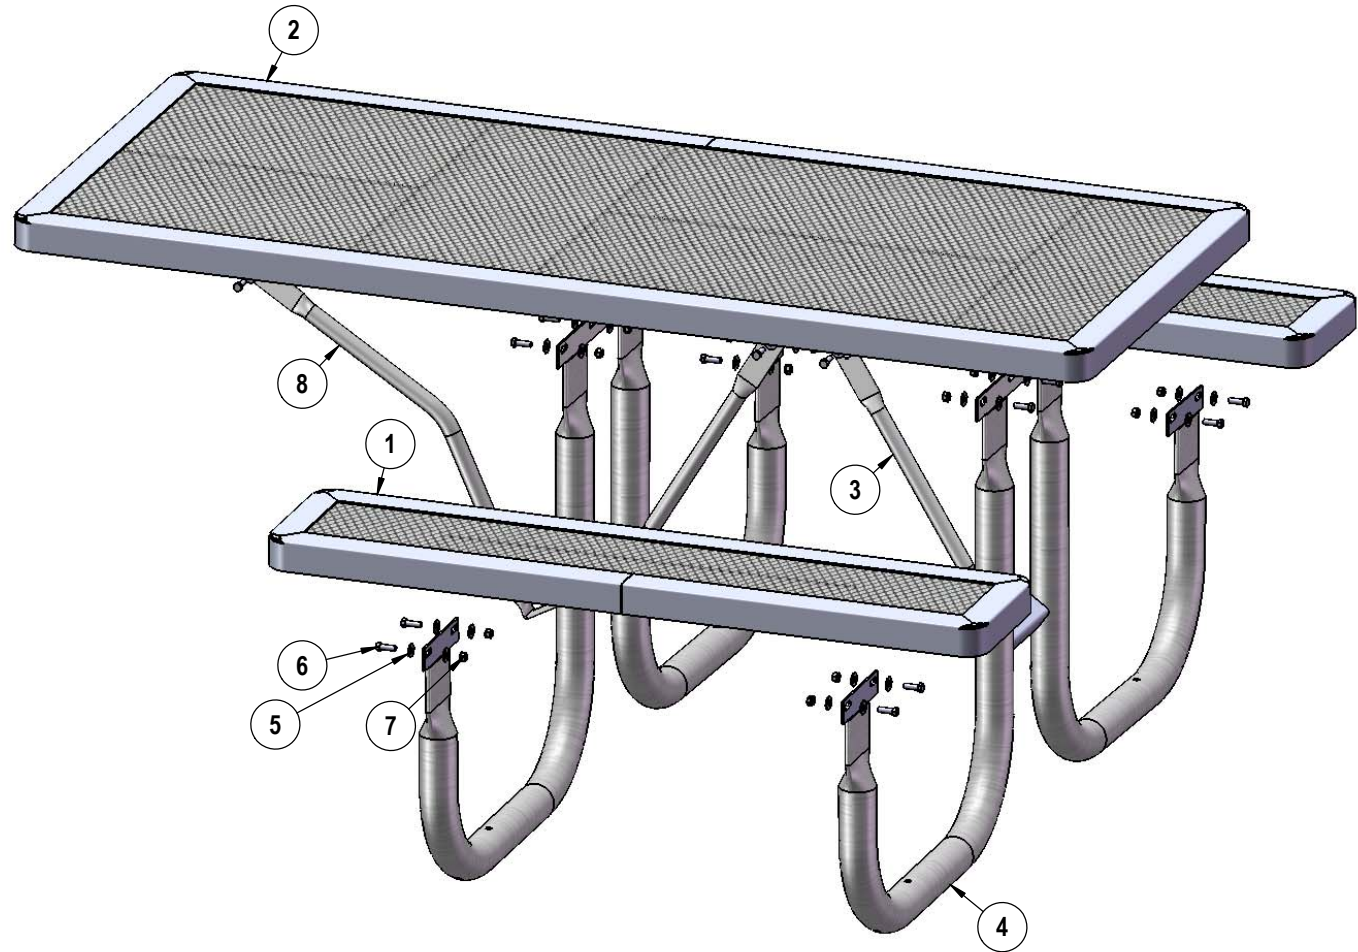


ITEM NO.	PartNo	DESCRIPTION	QTY
1	RC48-S	4' long x 10" wide regal expanded seat	2
2	RC72HS-T	6' HS regal expanded top	1
3	P-01-04-0243	21 3/8" Brace	2
4	P-V238	238 Vinyl Frame	2
5	33-02-0007	5/16" SS Washer	42
6	33-05-0029	5/16" x 1" Machine Bolt (SS)	21
7	33-03-0012	5/16" Kep Nut (SS)	21
8	P-01-04-0148	158/238 HS Brace	1

STEP 1

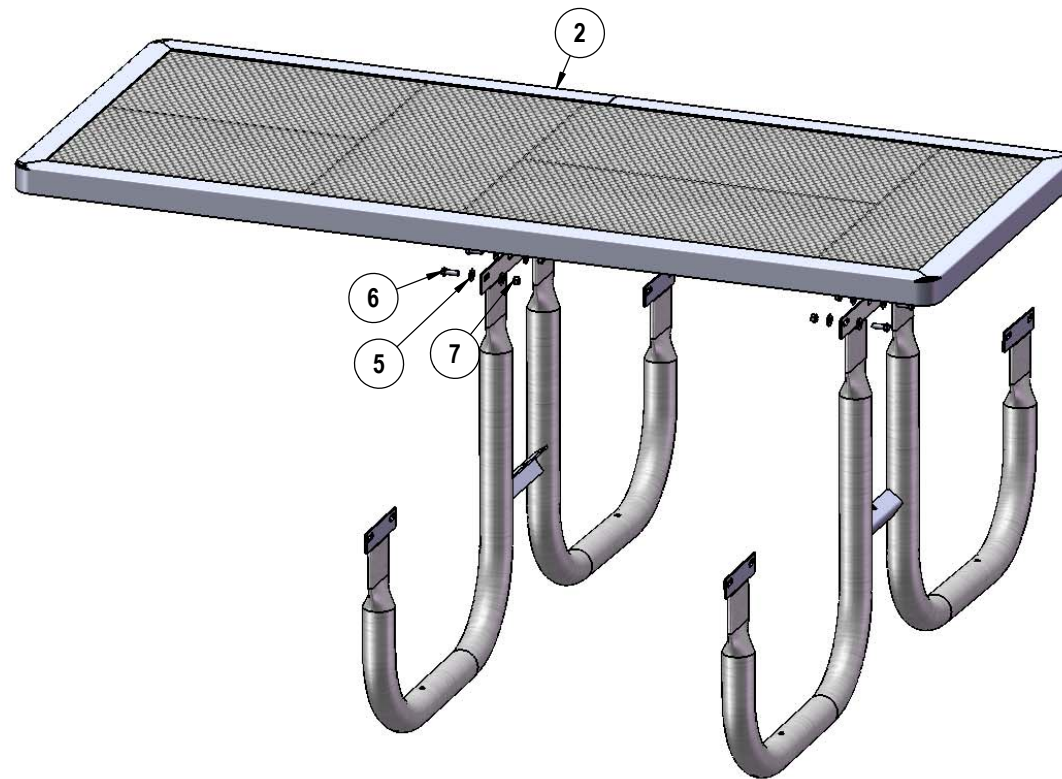


Attach the top to the top legs as shown using specified hardware.

STEP 2

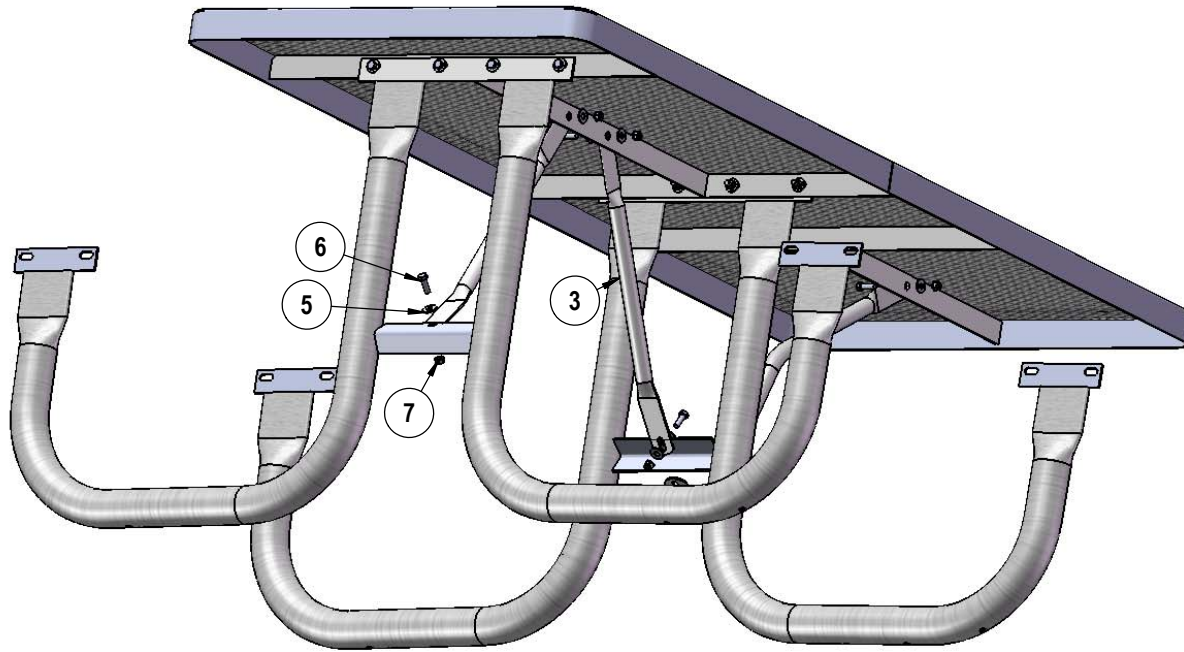

Attach the braces to the frame and under side of the top as shown using specified hardware.

STEP 3

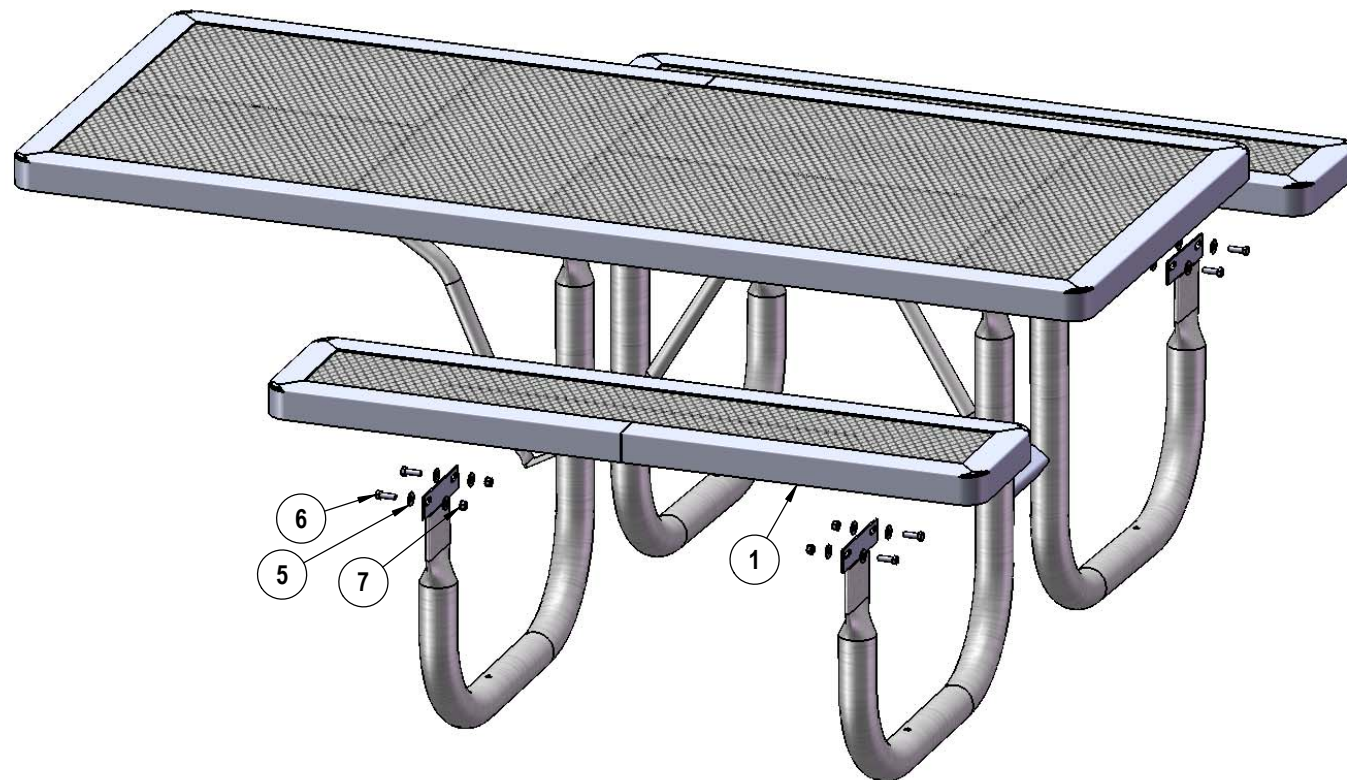

Attach the seats to the frame as shown using specified hardware.

OVERALL DIMENSIONS

